
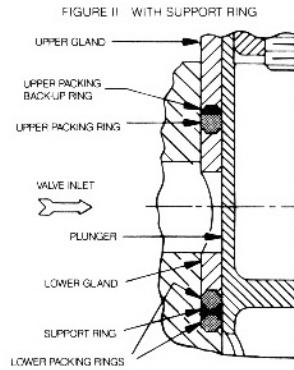


YARWAY

installation of packing rings in the seatless blow-off valve

©1991 Yarway Corporation

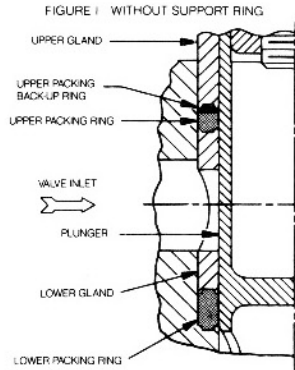

Remove the stopscrew, then remove the yoke nuts and yoke springs. Turn the handwheel to open the valve. This raises the plunger.

Turn the handwheel to close the valve. The yoke will rise. Turn the yoke so that the holes and studs are out of line and turn the handwheel to open the valve. The plunger is thus withdrawn from the body.

Remove the glands and old packing (using a Yarway puller).

Install new packing rings (see Figs. I or II), glands and stopscrew in the body and replace the yoke (with the plunger screwed all the way up on the stem). Pull down the yoke nuts and place the springs under them.

tyco / Flow Control

www.tycoflowcontrol.com